

## Selecting a gear

### Selecting a gear when downshifting

Downshifting must be done using the speedometer display.

- 0 - 10 km/h -> 1st gear
- 10 - 30 km/h -> 2nd gear
- 30 - 40 km/h -> 3rd gear
- 40 - 50 km/h -> 4th gear
- 50 - 60 km/h -> 5th gear

### Selecting a gear when shifting up

Upshifting should be done using the Rev counter display.

Class B:

Shifting to the next higher gear should be done at 2000 revs.

-> When driving at a constant speed, the revs should be below 2000 revs.

Class A:

Shifting to the next higher gear should be done at 3000 revs.

-> When driving at a constant speed, the revs should be below 3000 revs.